


Installing the FOREST SHUTTLE[®] iOn


Installing the FOREST SHUTTLE® iOn:



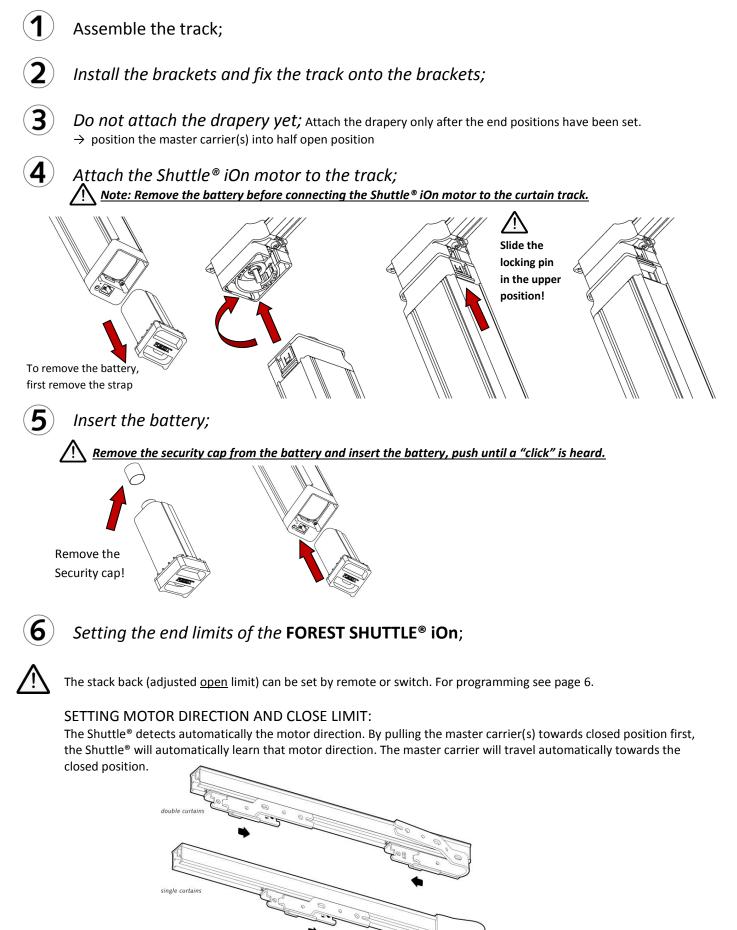

SETTING OPEN LIMIT:

When the closed position is reached, the master carrier(s) will automatic run towards the open position.

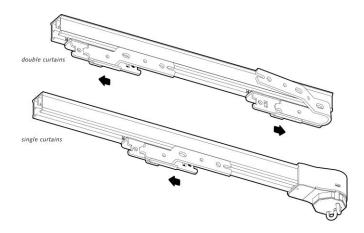


Stack back: When the master carrier reaches the fully open position it will stop (yellow LED4 is on). Now the open limit setting can be adjusted by hand, by remote or dry contact input. When the master carrier is not moved for 10 seconds, the yellow LED4 will go off and the open limit is set. The minimal automatic adjustment is 3 cm (1.2").

If you are not satisfied with the programmed end limits, then re-set the end limits as shown in the configuration table on page 6 and proceed from step 4.



Pair the Shuttle[®] iOn with a remote control;

Any type of Forest RF remote can be paired to the Shuttle[®] iOn by activating the RF learning mode on the Shuttle[®] iOn and pressing the Open button on the remote.

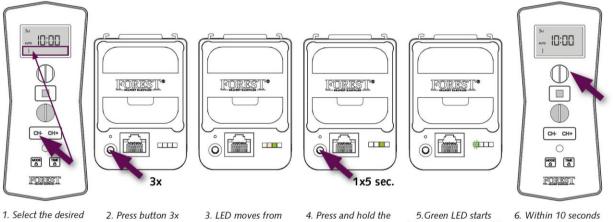

1. Select the desired channel.

2. Press button 3x3. Iwith a pin or pen.1⁴

LED moves from 1st>2nd>3rd LED.

4. Press and hold the button for 5 seconds. blinking motor is in RF pairing mode.

rts 6. Within 10 seco n RF press OPEN.




Shuttle[®] iOn Battery:



When the battery is getting low, the Shuttle® iOn motor will begin to operate slower, (6 cm/s – 2,36"/s), this is an indication to re-charge the battery.


Charging the battery:

Take out the battery from the Shuttle[®] iOn motor and connect the charger to the battery as pictured below:

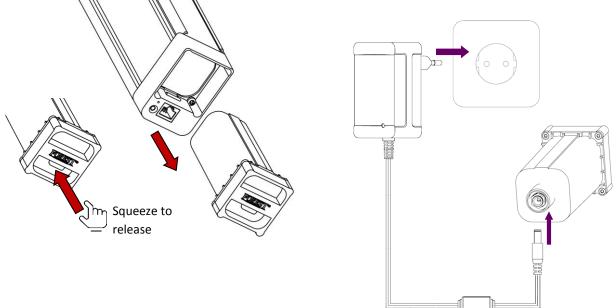

Charging:

The charger is equipped with an indicator LED on the front side, this LED indicates the actual charging status.

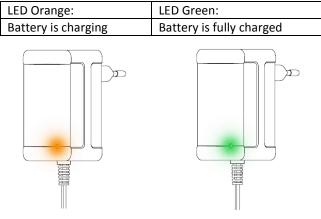

- Charging time battery is 5 hours;
 - Do not use third party battery chargers;
 - Do not attempt to repair the charger if damaged; replace the charger in this case;
 - Do not charge the battery in humid conditions;
 - Replace charger if damaged;
 - Do not expose the battery pack to direct sunlight while charging;
 - Do not repair the battery pack if damaged;
 - Replace the battery pack if damaged;
 - Do not charge the battery in ambient conditions below 10°C (50°F);
 - Dispose properly.






Connecting the SHUTTLE[®] iOn using the dry contact input:

/! Make sure the switch, relay or home automation output is based on dry contact / potential free.

The Shuttle[®] iOn can be easily connected to Home automation systems or manual switches using the dry contact inputs on the RJ45 port of the motor.

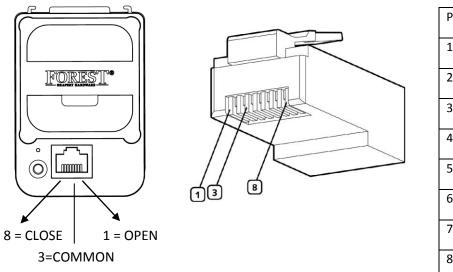

PIN	Port	
1	OPEN	
2	-	
3	COMMON	
4	-	
5	-	
6	-	
7	-	
8	CLOSE	

OPEN: Pin 1 is connected to pin 3 the motor will open the curtain

CLOSE: Pin 8 is connected to pin 3 the motor will close the curtain

STOP: Pin 1 and 8 are connected to pin 3 the motor will stop moving the curtain

Different dry contact modes: (See page 6 on how to change the dry contact mode behaviour) Depending on the building automation hardware used, different types of dry contact modes are available.


- Pulse mode:
- Continuous mode:
- Single button switch mode:

When short contact is made between the pins the curtain will fully open or close The curtain will move as long as the contact is made (mostly used for Home Automation) Every contact made between pin 3(COMMON) and pin 1 or 8 will trigger; open -> close -> stop -> open -> close -> stop -> etc....



Advanced settings Explanation of the menu settings:

	LEDs		
	1234		Factory
Presses		Function	default
1		Speed Normal 14 cm/s	•
2		Speed High 17 cm/s	
3		RF 433MHz remote pairing mode	
4		Reset Open & Close position	
5		Dry contact pulse input	•
6		Dry contact continuous input	
7		Dry contact single switch input	
8		Touch control sensitivity High	
9		Touch control sensitivity Low	
10		Touch control Off	
11		N/A	
12		N/A	
13		N/A	
14		Adjust Open Position (Stackback)	
15		Reverse motor direction	
16		Factory Reset (default settings)	

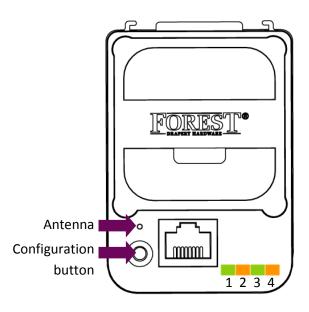

1 & 2: Speed Setting

Standard speed setting is 14cm/s. This can be increased to 17cm/s. Press the configuration button 2 times. To confirm, press and hold the button down a 3rd time for at least 4 seconds; the led will blink 3 times and turn OFF.

3: Pairing / Erasing mode for 433MHz RF remote

Programming Forest RF remote channel: Press the configuration button 3 times and hold it down the 4th time for 4 seconds - LED will start blinking for 10 seconds - Within these 10 seconds press the OPEN button on the selected channel on the remote to pair the remote with the Shuttle[®] iOn motor.

Erasing a RF remote channel: Same procedure as mentioned above but press CLOSE instead of OPEN to erase the paired RF remote channel.

4: Reset / setting end limits

To reset the end limits: Make sure the curtain is in the open position first. Now press the configuration button 4 times and hold it down the 5th time for 4 seconds until the led blinks 3 times and turns OFF. Remove the battery and after 5 seconds re-insert the battery. Now the limits have been erased; for setting the limits again refer to page 3 section 7 of this manual.

5, 6 & 7: Dry contact input modes

Default mode is Pulse contact. To switch to continuous or single switch mode, press configuration button 6 or 7 times respectively; press and hold once more for 4 seconds until the led blinks 3 times and turns OFF. Please see page 5 for detailed explanation on input modes. Make sure the contact is dry / free of potential (no power on the cable).

8, 9 & 10: Touch Impulse modes

The Shuttle[®] iOn recognizes when the curtain is pulled by hand to open or close. The Shuttle[®] iOn will then open or close the curtain all the way. Default setting is high sensitive. Touch Impulse can be set to less sensitive or off, with 9 or 10 presses respectively. To confirm, press and hold once more for 4 seconds until the led blinks 3 times and turns OFF.

14: Adjust open position (stack back)

Press the button 14 times and hold it down the 15th time for 4 seconds. This function creates a 10 second timeframe in which the open position of the curtain can be adjusted. This is particularly easy when the curtains are too tightly squeezed together.

15: Reverse Motor direction

This function easily reverses the motor direction when the motor opens instead of closes, after having given the close command on the remote control. To do so, press the configuration button 15 times and hold it down the 16th time for 4 seconds.

16: Factory Reset


For a full reset of all settings, press configuration button 16 times and hold it down the 17th time for 4 seconds until the led blinks 3 times and turns OFF. Remove the battery and after 5 seconds re-insert the battery.



Technical specification FOREST SHUTTLE® iOn:

Shuttle® iOn Motor

Article Number:	White: 5234000000 (incl battery)			
	Black: 5234006000 (incl battery)			
Voltage Shuttle [®] iOn:	14.4Vdc			
Max. power:	30W			
Torque:	1Nm			
Frequency:	433.92 MHz			
Speed 1: Normal	14 cm/s (5.51"/s)			
Speed 2: High	17 cm/s (6.69"/s)			
Speed 3: Battery low	6 cm/s (2.36"/s)			
Max. curtain weight:	25kg (straight track)			
Max. track length:	8 meter (33ft) 1 bend			
	5 meter (16ft) 2 bends			
Shuttle [®] iOn dimensions:	74 x 50 x 317mm (2.91 x 1.97 x 12.48")			
Net weight motor:	1160 grams			
Protection degree:	IP20			
Max. running time (in one direction):	150 sec			
Sound level:	< 41dB			
Ambient temperature:	0 - 40°C (32 - 104°F)			
Relative humidity:	10 - 80%			
Maximum useable altitude above sea level: 2000m (6561ft.)				
Certification & Marking:	CE Shuttle iOn			

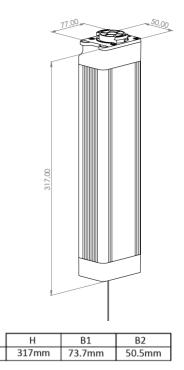

Technical specification BATTERY CHARGER:

Battery charger	EU	UK	US	AUS
Forest article number:	5234000002	5234000003	5234000004	5234000005
Model:	KS39DU-1680100CE	KS39DU-1680100CB	KS39DU-1680100CU	KS39DU-1680100CA
Input:	100 - 240V~	100 - 240V~	100 - 240V~	100 - 240V~
	50 - 60Hz - 2.0A			
Output:	16.8 V DC - 1.0A			
Insulation Class:	II	II	II	II
Certification & Marking	CE	CE	UL	SAA

Technical specification BATTERY PACK:

White	Black
5234000001	5234006001
4-Cell Lithium iOn	4-Cell Lithium iOn
14.8V	14.8V
3400mAh	3400mAh
CE	CE
0°C to +40°C (32°F to 104°F)	0°C to +40°C (32°F to 104°F)
250 gr. (0.55 lbs)	250 gr. (0.55 lbs)
	5234000001 4-Cell Lithium iOn 14.8V 3400mAh CE 0°C to +40°C (32°F to 104°F)

motor



Track applications FOREST SHUTTLE® iOn:

The Forest Shuttle[®] iOn motor can be used exclusively on the following original Forest motorised track systems: FMS+[®] / FMS+[®] Recess / MRS[®] Motorised Rod System / DS-XL[®] Motorised / DS-XL[®] LED Motorised




The Forest Shuttle[®] iOn is not suitable for humid spaces, like bathrooms or outdoor use. It is important for the safety of persons to follow these instructions. Save these instructions for future reference. Do not use the product for any other purpose than intended. In order for the Forest Shuttle[®] iOn motor to function correctly and safely, the complete curtain system must be assembled with original parts and devices of

Forest Group Nederland B.V. This includes all components of the curtain track and battery charger.

Forest Group does not assume liability for resulting damages to property or personal injury, defects, labour on location, service calls, reinstallation or expenses involved shipping, packing or returning goods, if the product has been abused/modified in any way, damaged by improper use or failure to observe these operating instructions. The warranty/guarantee will then expire!

Do not allow children to play with the system or controls. Keep remote controls away from children. Frequently examine the installation for imbalance and signs of wear or damage. Do not use if repair or adjustment is necessary.

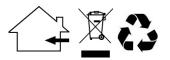

Environment: We recommend that you return a faulty battery pack to your local battery disposal, in accordance with the local environmental regulations for collecting and processing batteries.



WWW.FORESTGROUP.COM